




T680.01 IDENTIFICATION






T680.03 REMOVE STYLUS, BATTERY COVER AND BATTERY

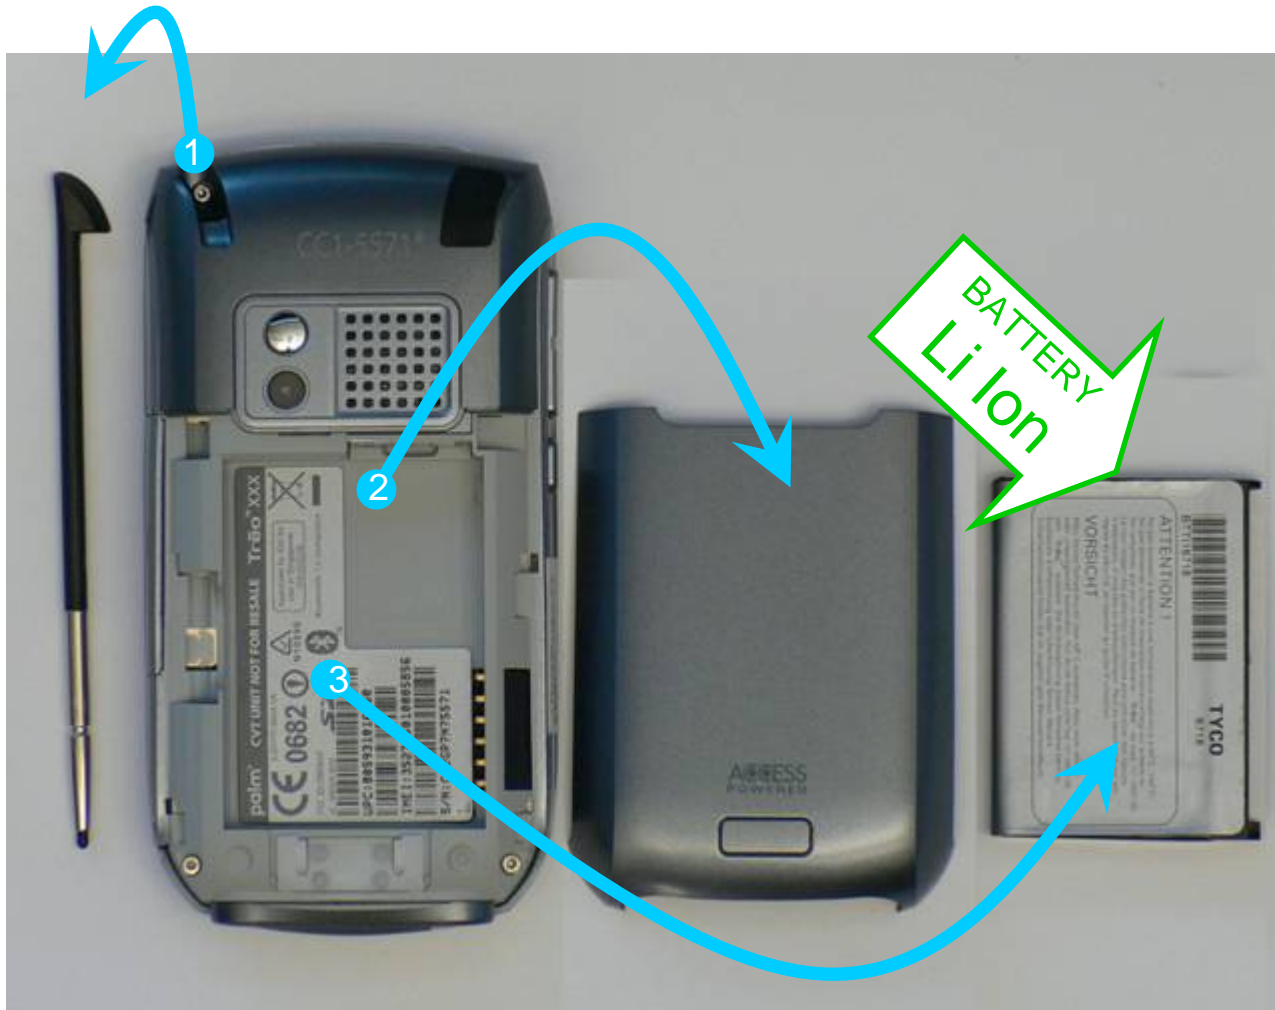

T680.04 LIFT ANTENNA JACK COVER




T680.05 REMOVE ANTENNA COVER AND SCREWS (4)

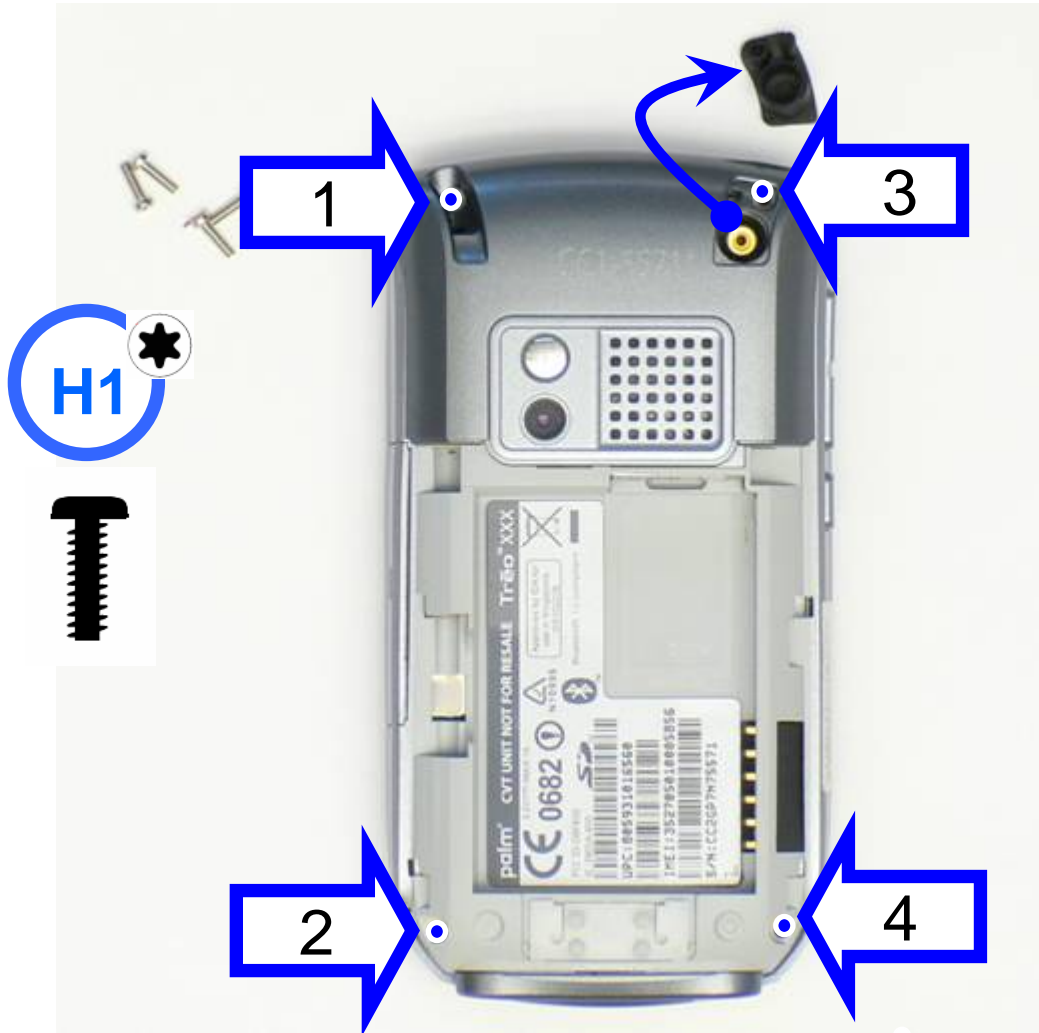


T680.07 OPEN CASE





T680.08 REMOVE BACK COVER< IrDA WINDOW AND SLIDER, CONNECTOR BEZEL;
OPEN KEYBOARD CONNECTOR

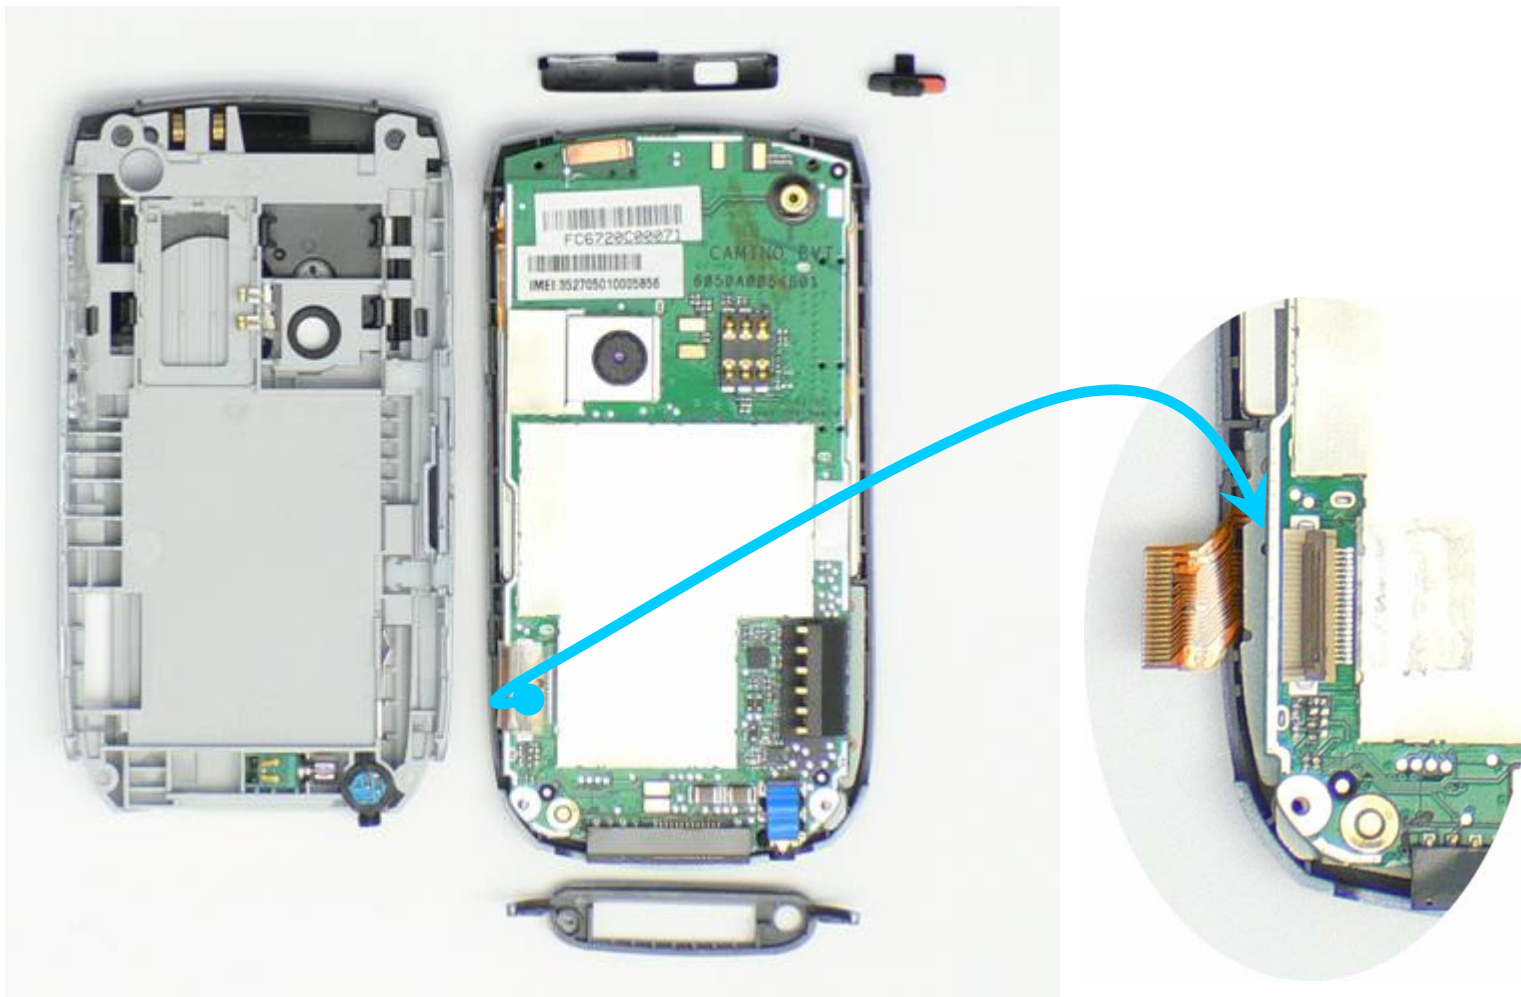

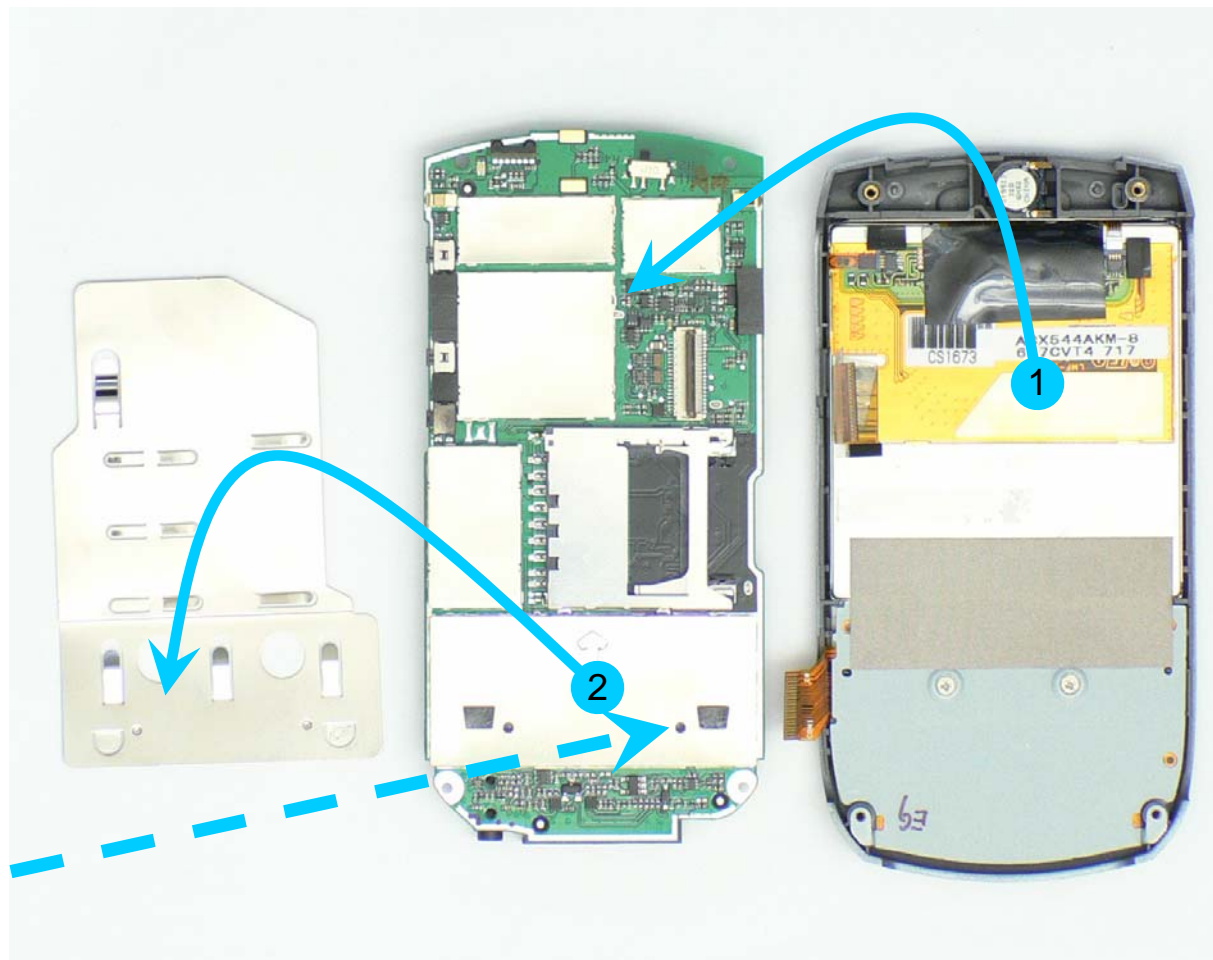


T680.10 REMOVE RECEIVER, TAPE AND KEYBOARD SCREWS (2)


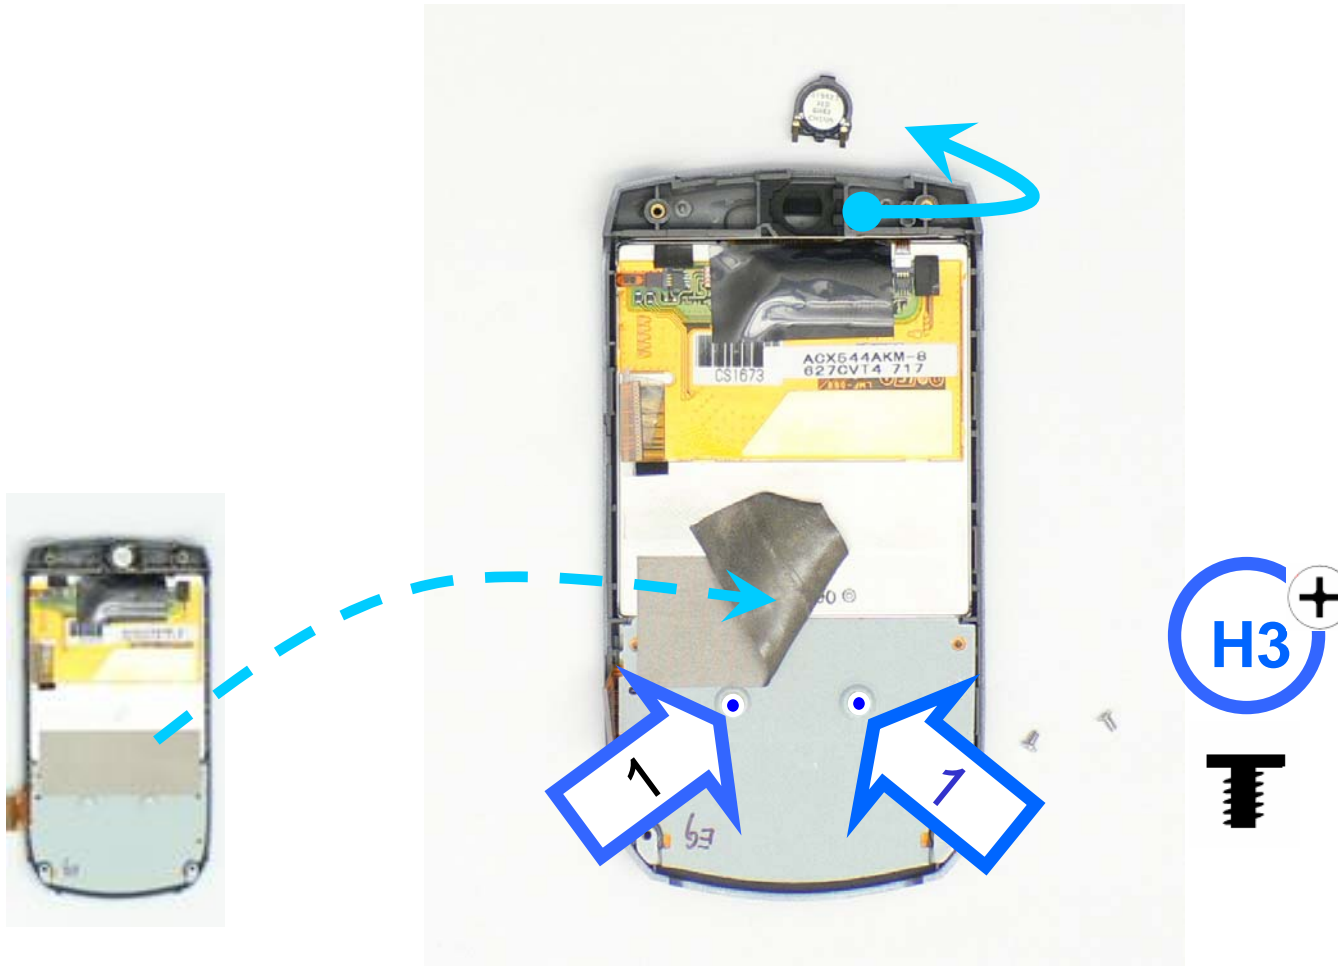


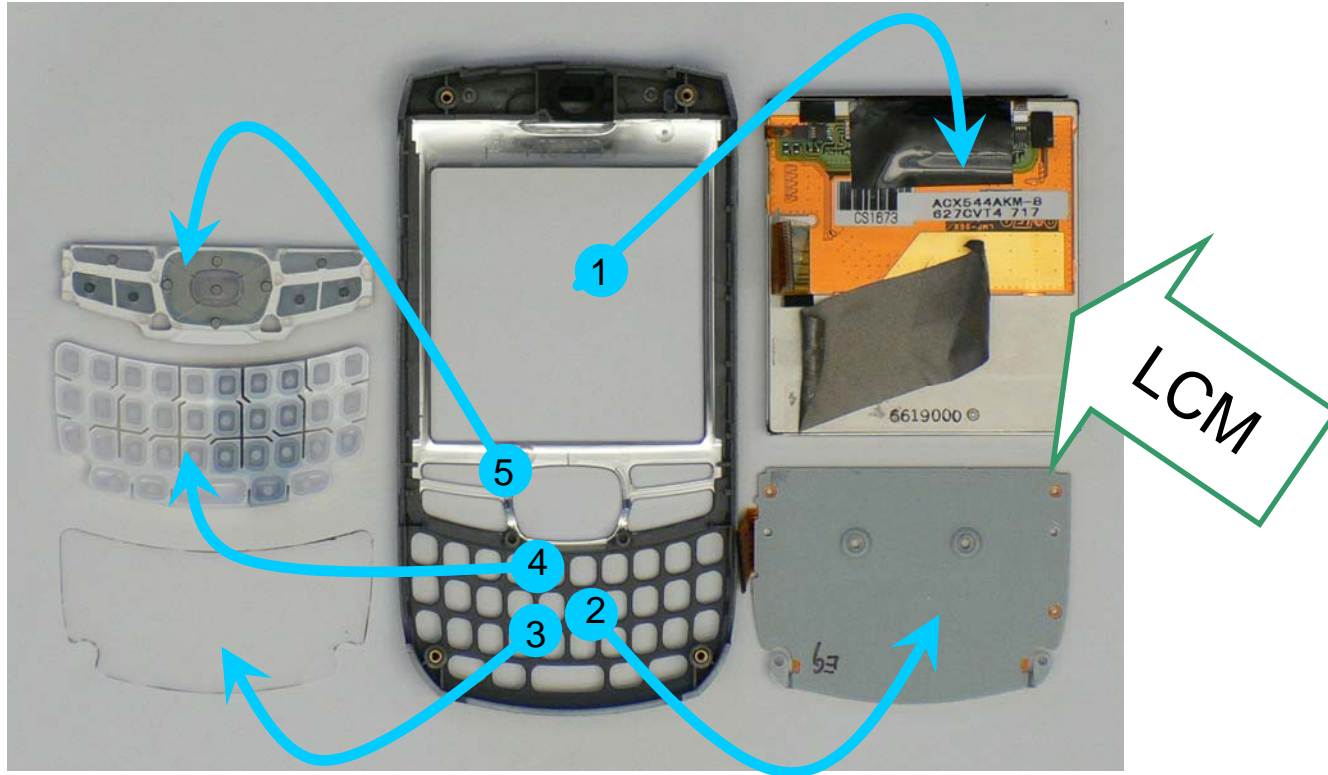


T680.12 REMOVE VOLUME BUTTONS, STYLUS SPRING, MICROPHONE AND VIBRATOR

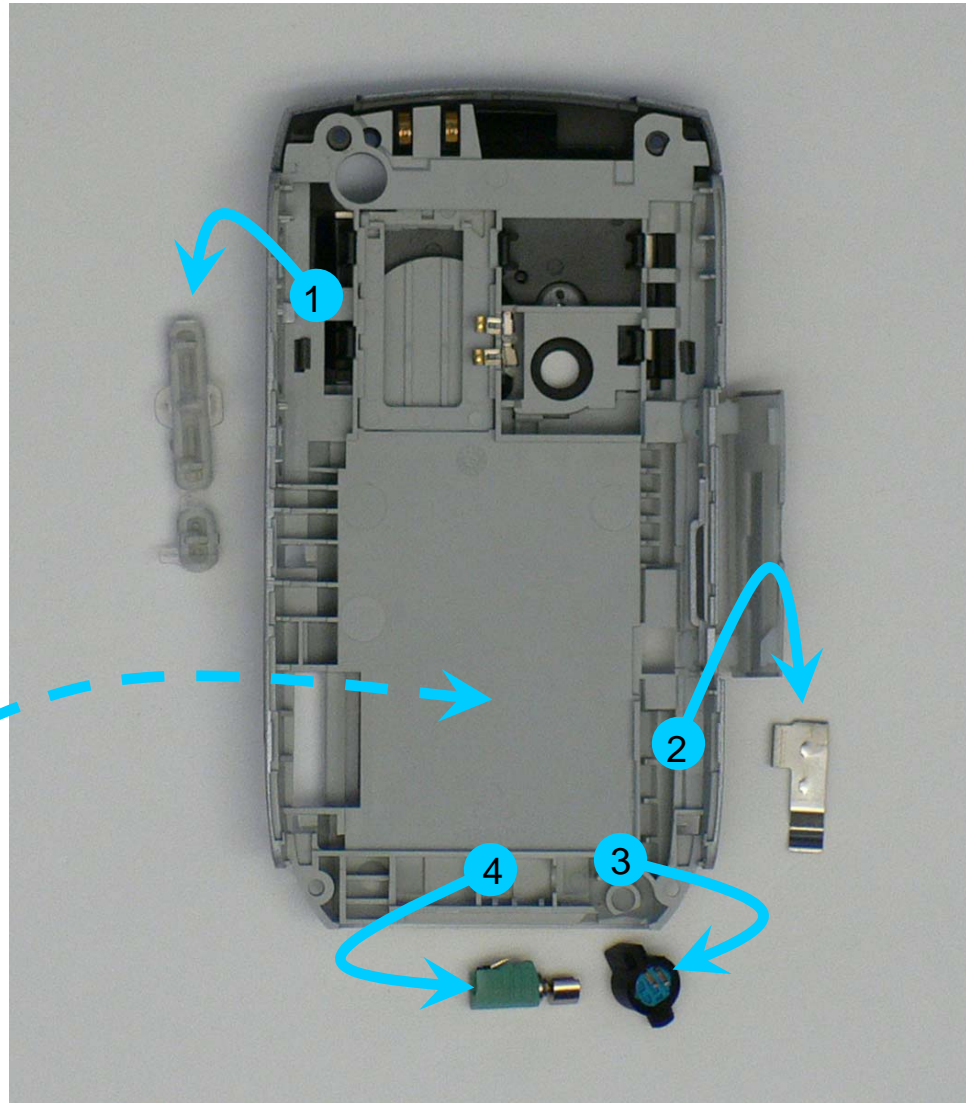

T680.13 REMOVE SPEAKER COVER

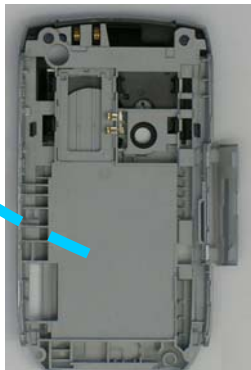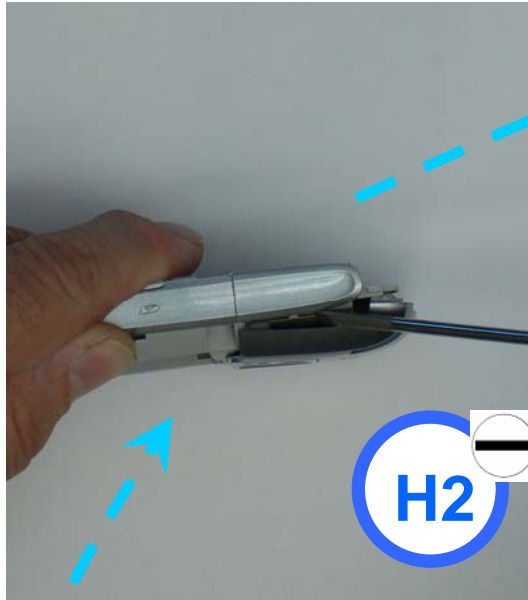


T680.14 REMOVE ANTENNA AND SPEAKER

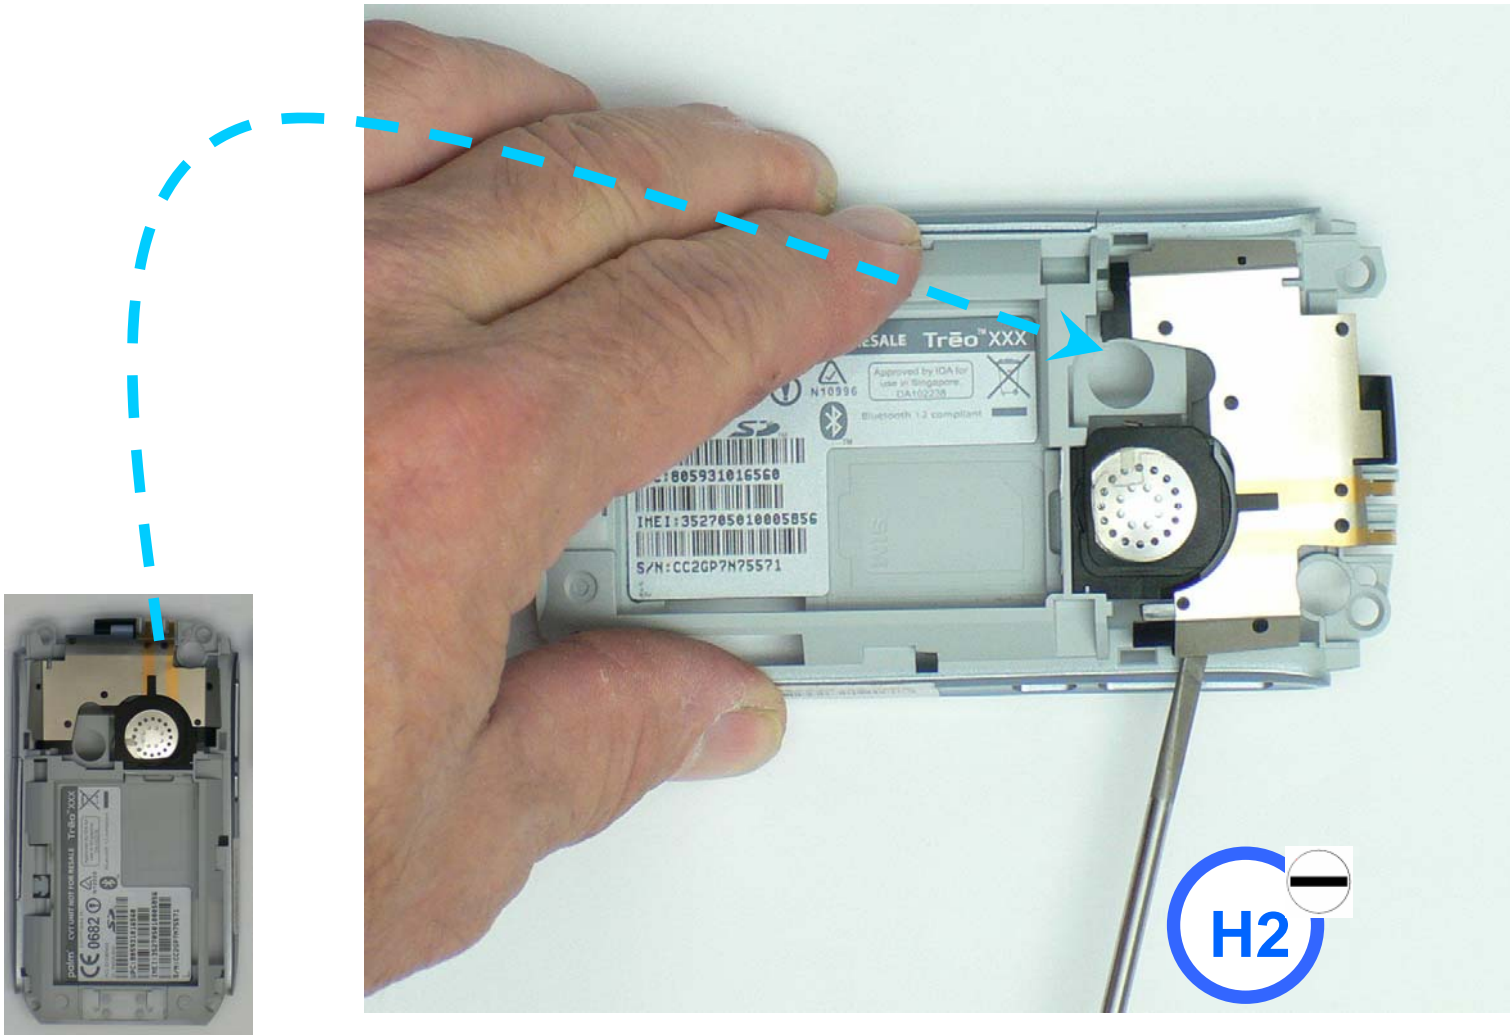

T680.15 REMOVE SPEAKER COVER



 

14NOV06

PCBA

