



T700.01 IDENTIFICATION

Treo™ 700P
SMARTPHONE



Treo™ 700w|wx
SMARTPHONES



Recycling Disassembly Instructions for
Palm® Treo™ 700 SmartPhone


Only authorized recyclers are permitted to use these disassembly instructions. Any attempted disassembly by a user or unauthorized party will void the product warranty and may irreparably damage the product.

24Jul06






T700.03 REMOVE BATTERY AND STYLUS

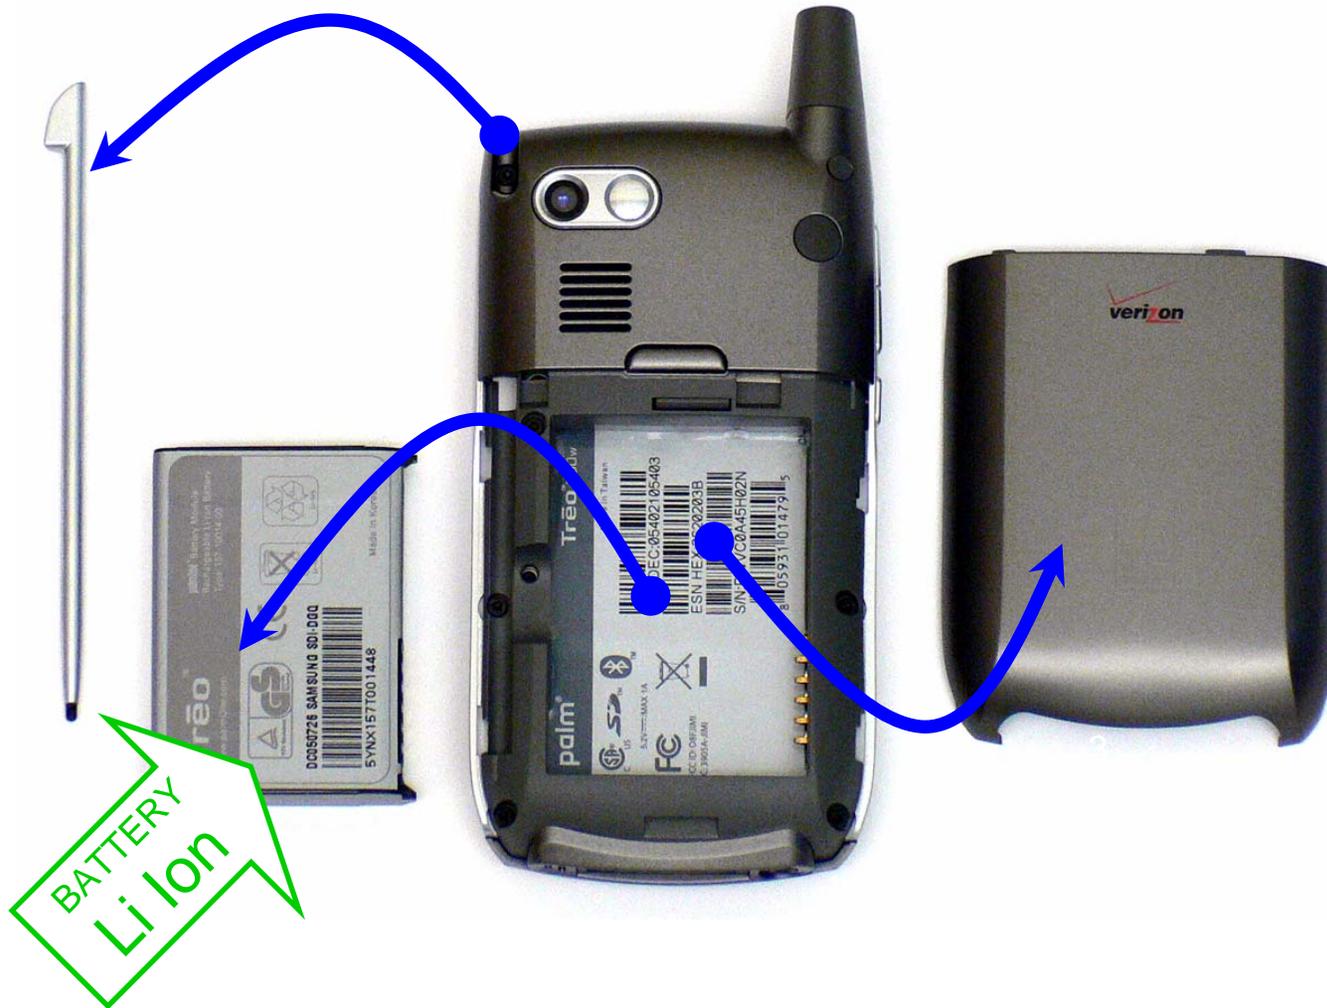




T700.04 REMOVE INSERTS

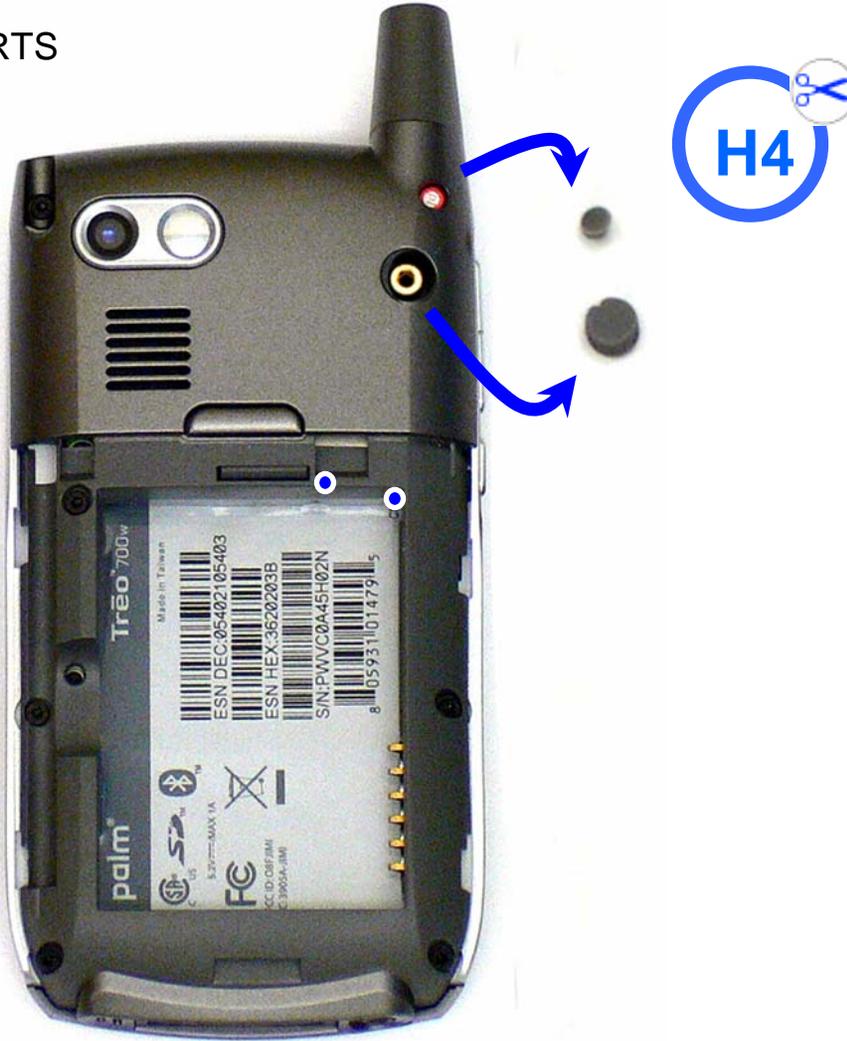





T700.05 REMOVE SCREWS (7) AND ANTENNA

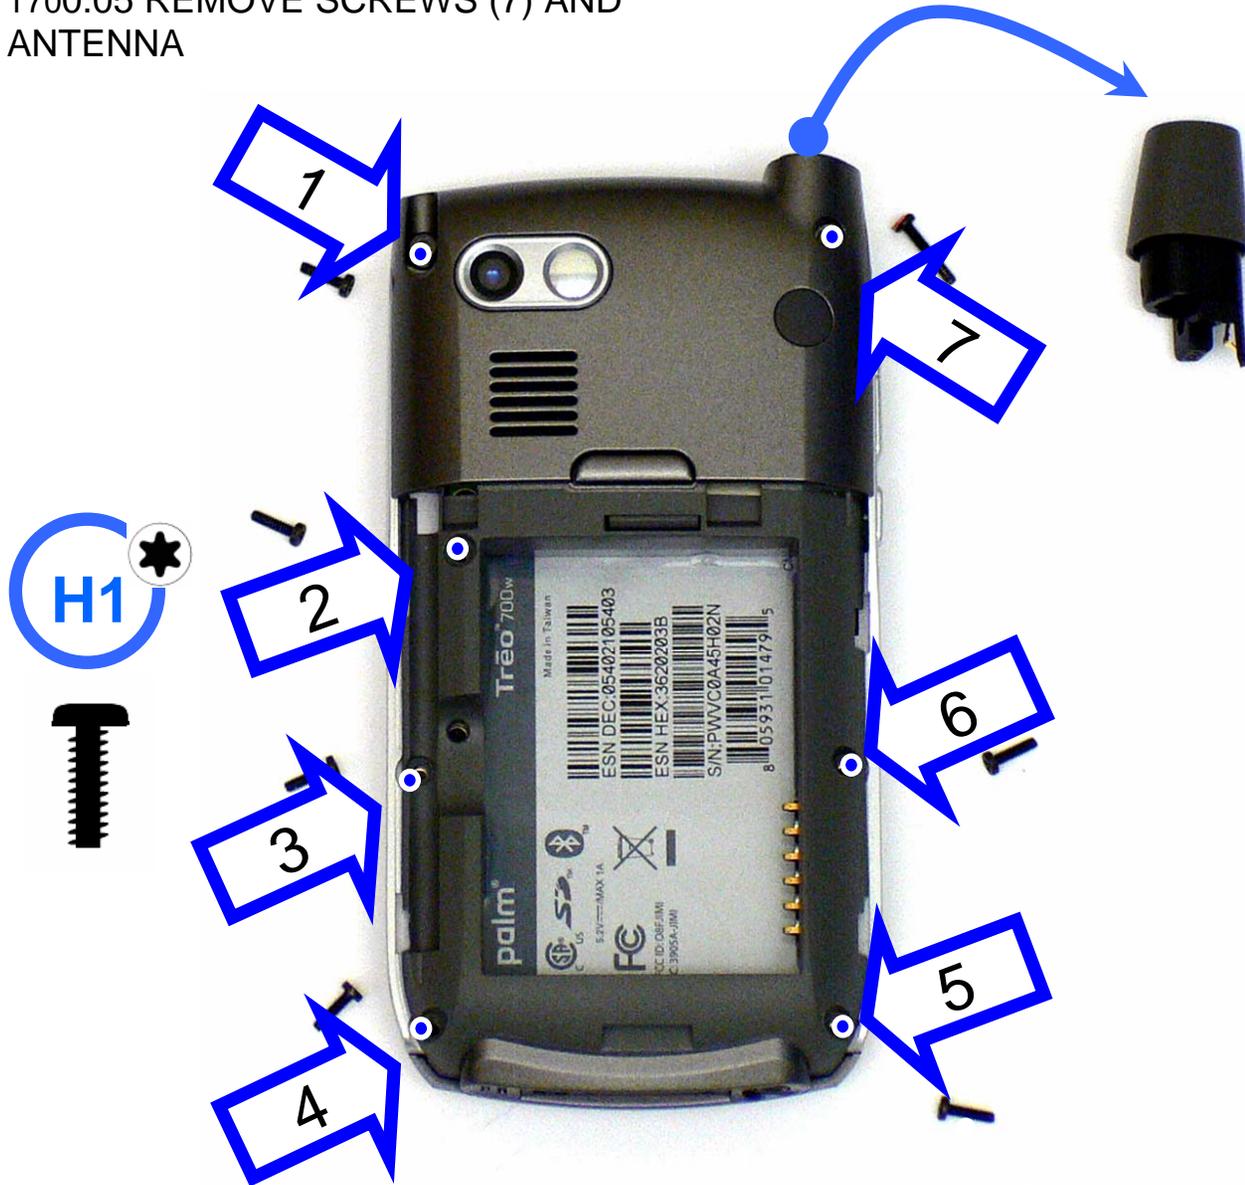

T700.07 OPEN CASE

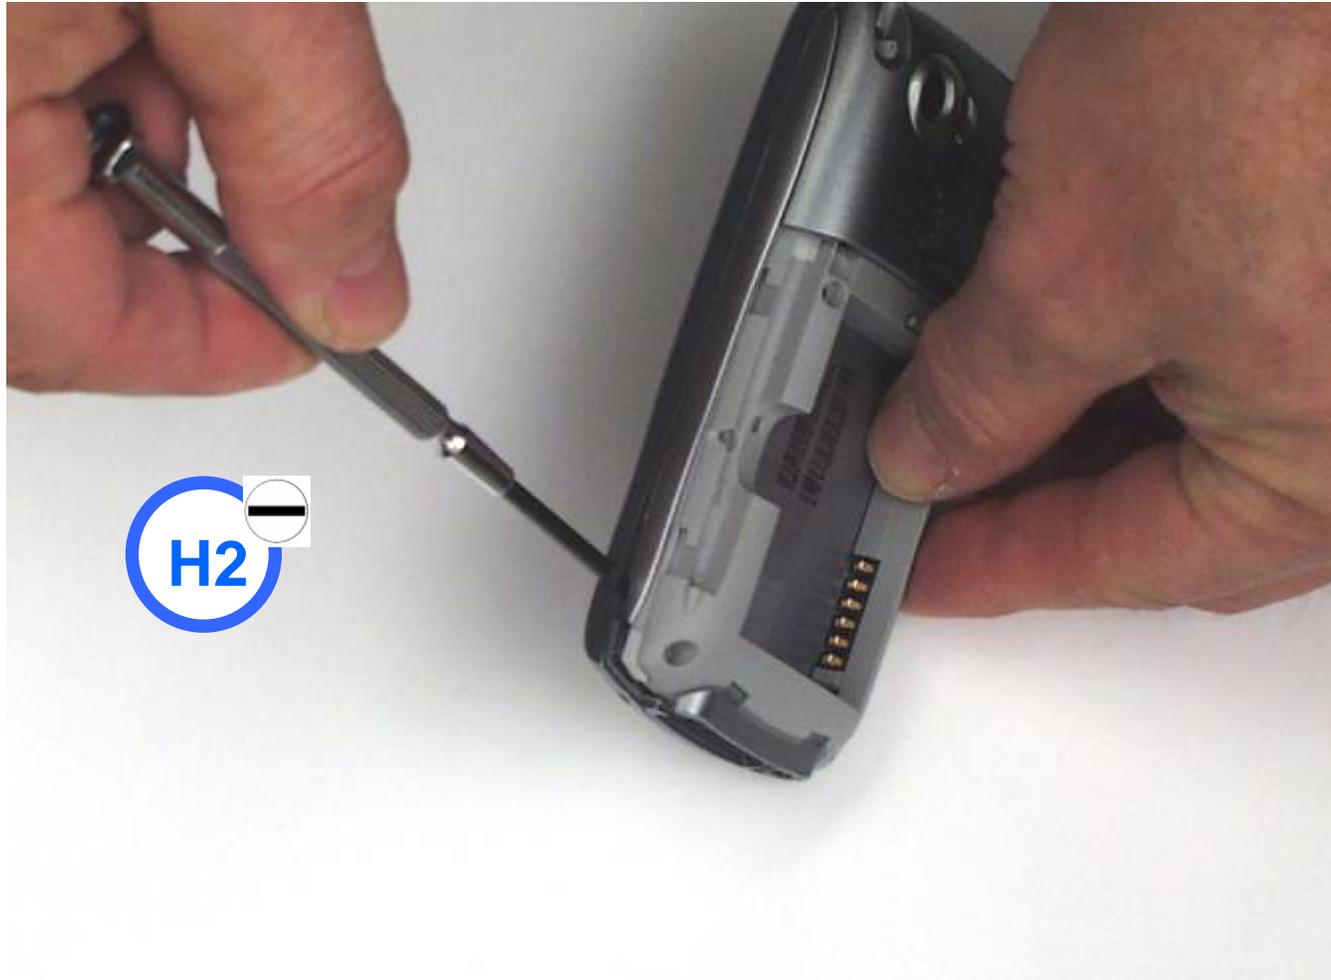


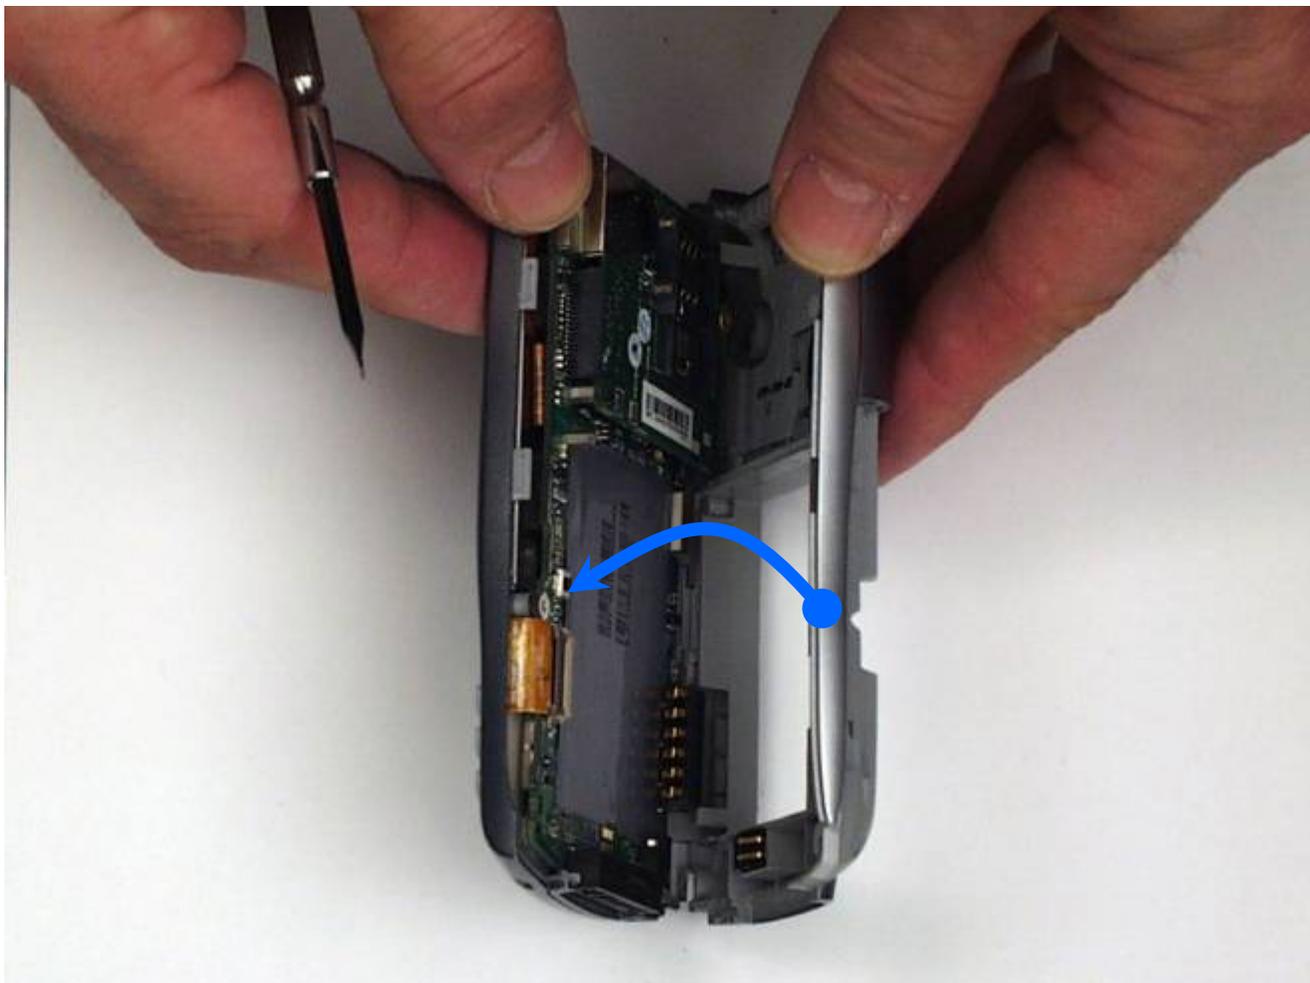







T700.10 REMOVE MICROPHONE BOOT, VIBRATOR AND SPEAKER,

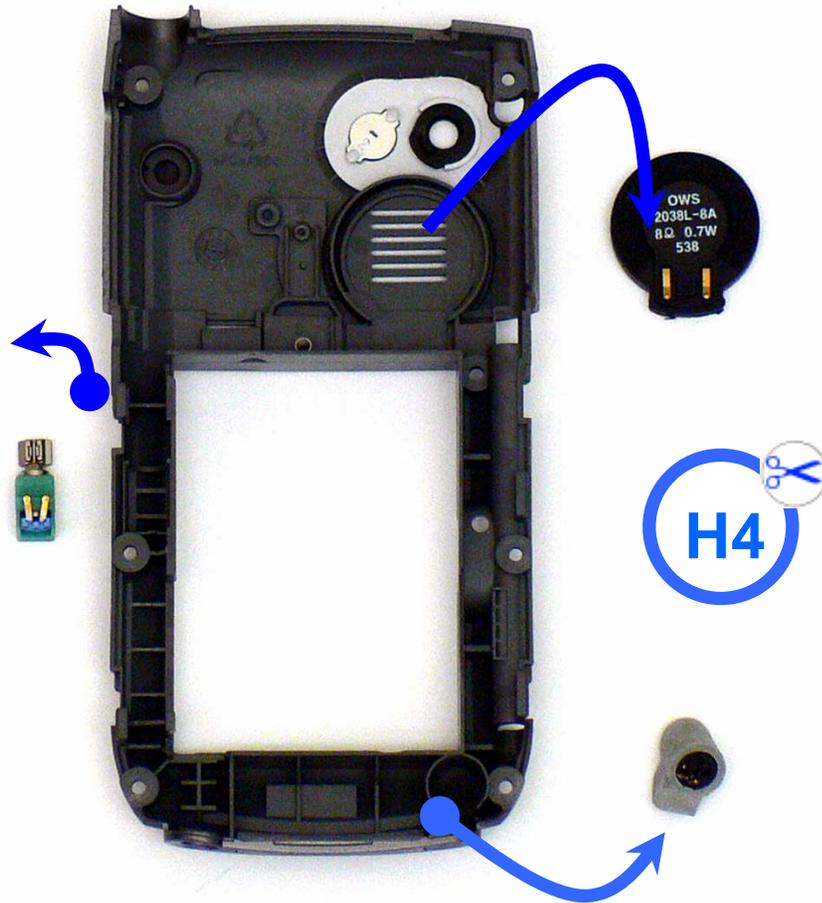

T700.11 REMOVE MIDFRAME

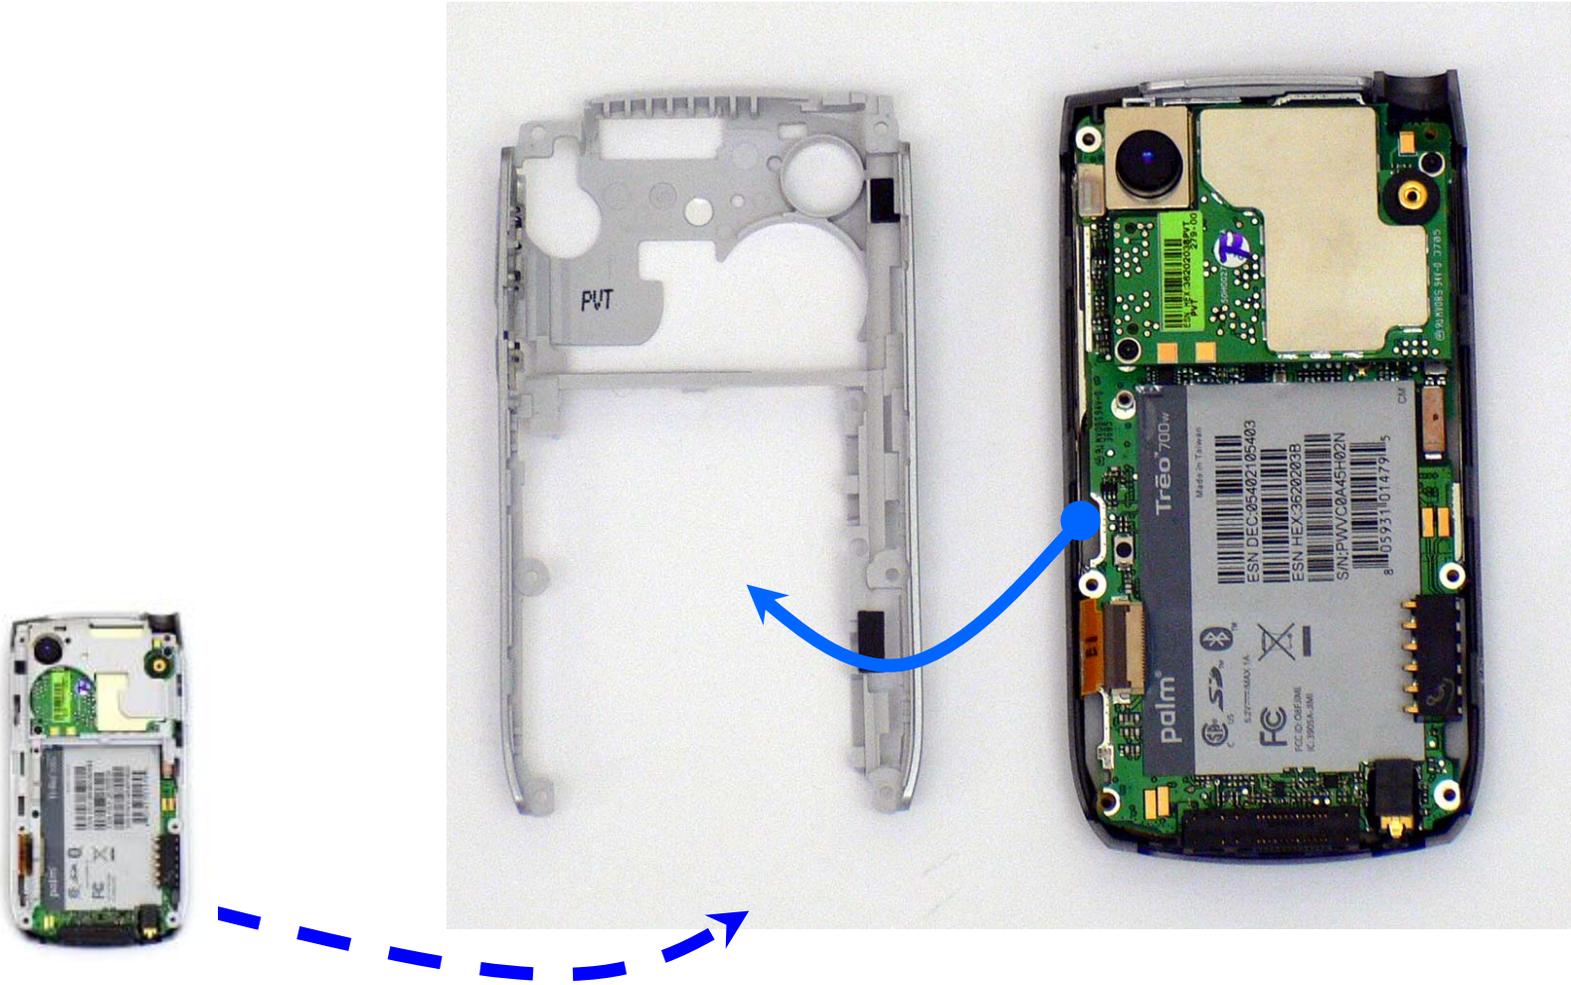


T700.12 REMOVE PCBA AND LCM; NOTE BRASS INSERTS (6)

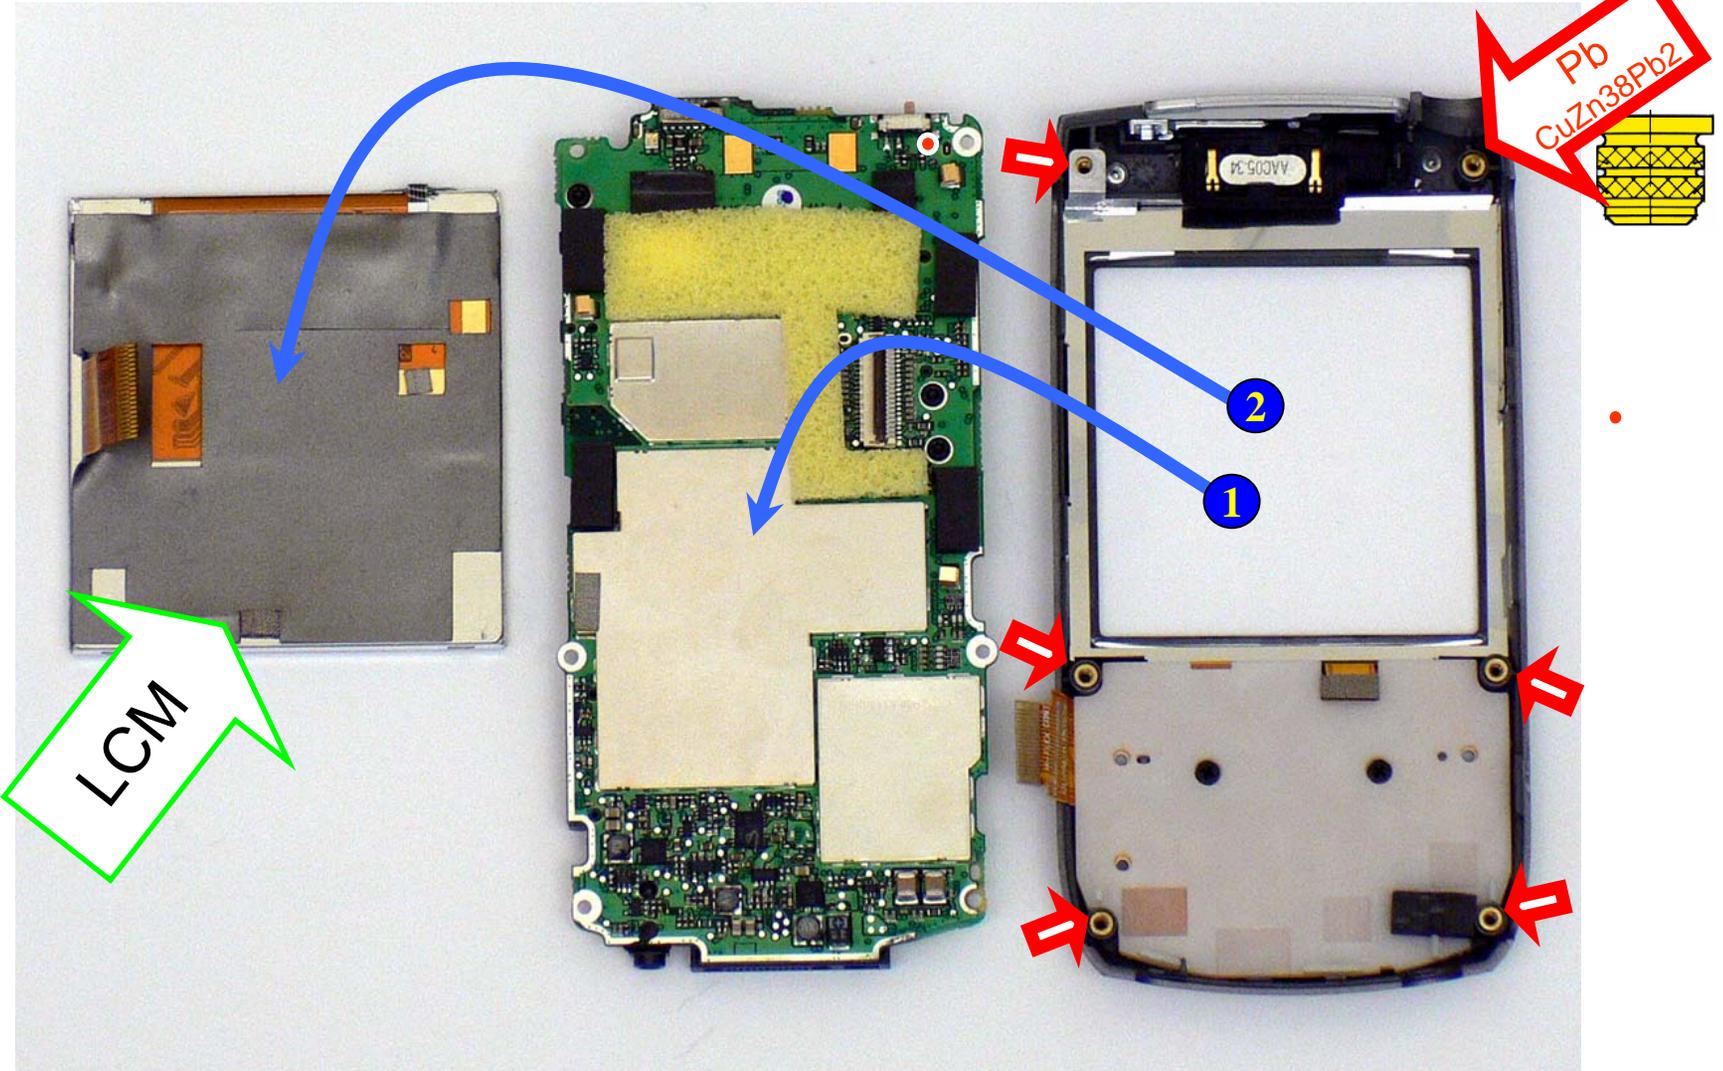



T700.13 REMOVE RECEIVER, SHIELD AND KEYPAD SCREWS (2)

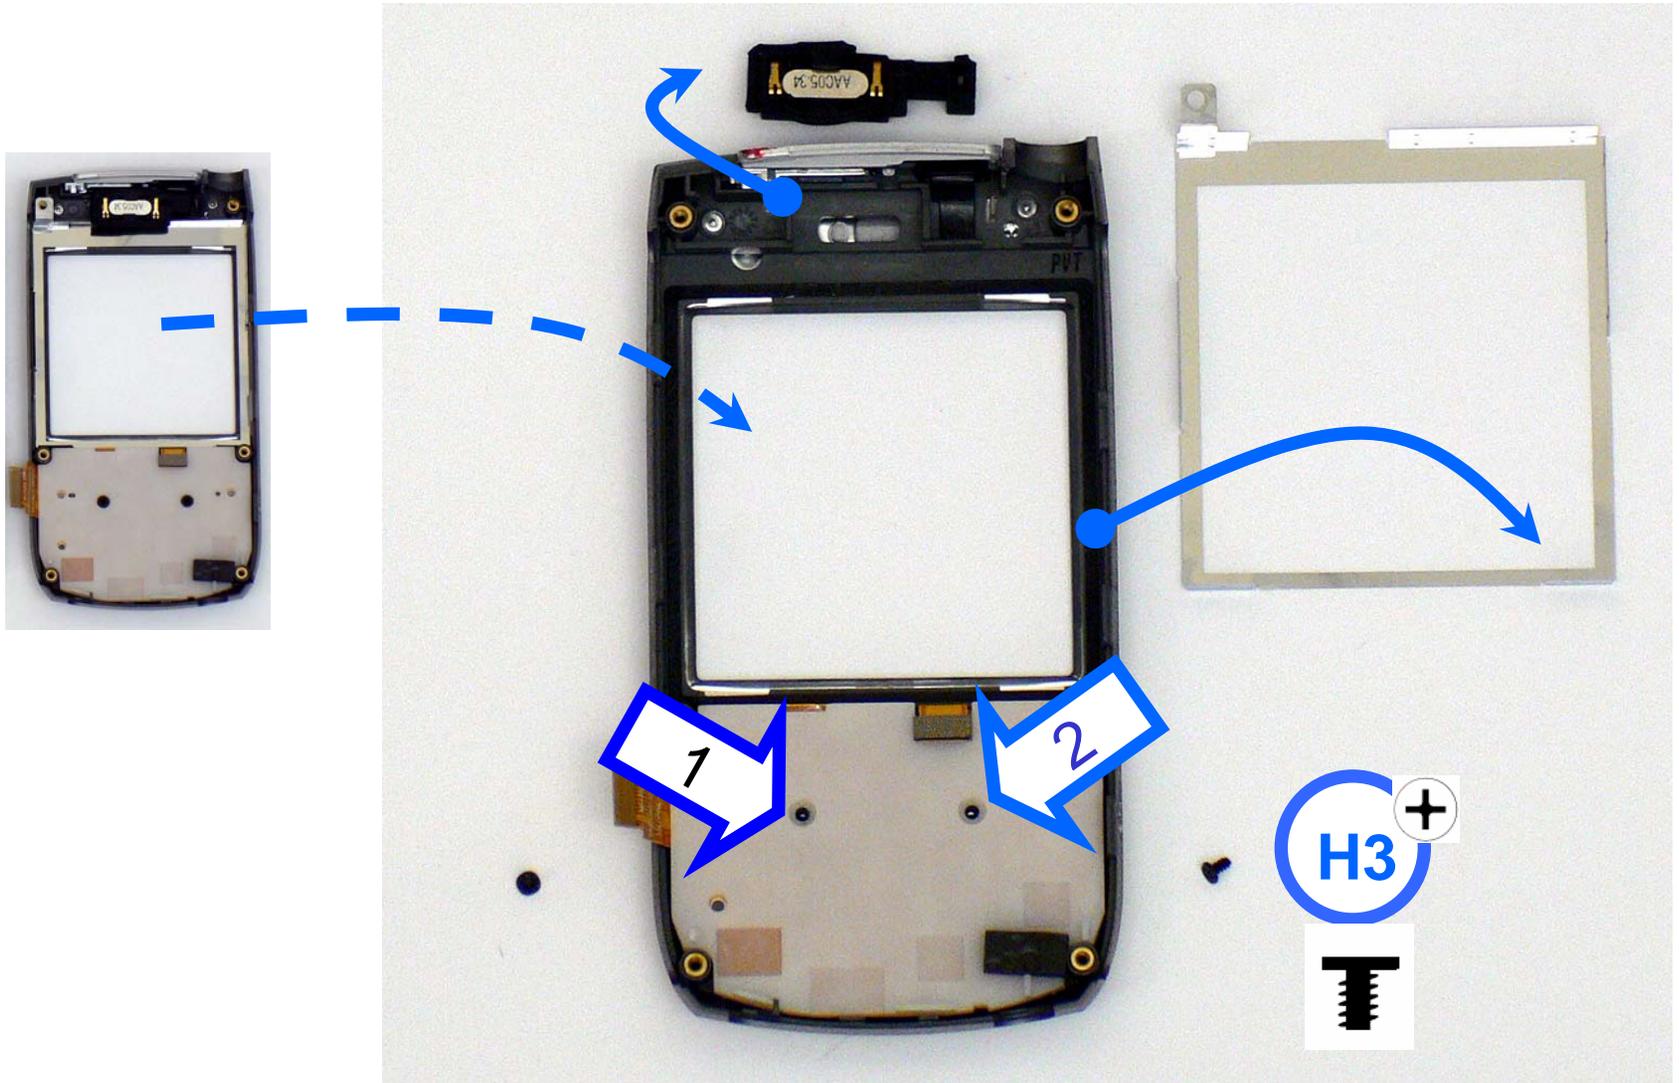




T700.14 REMOVE KEYPAD AND KEYS





T700.15 REMOVE SCREWS (2) AND RADIO PCBA

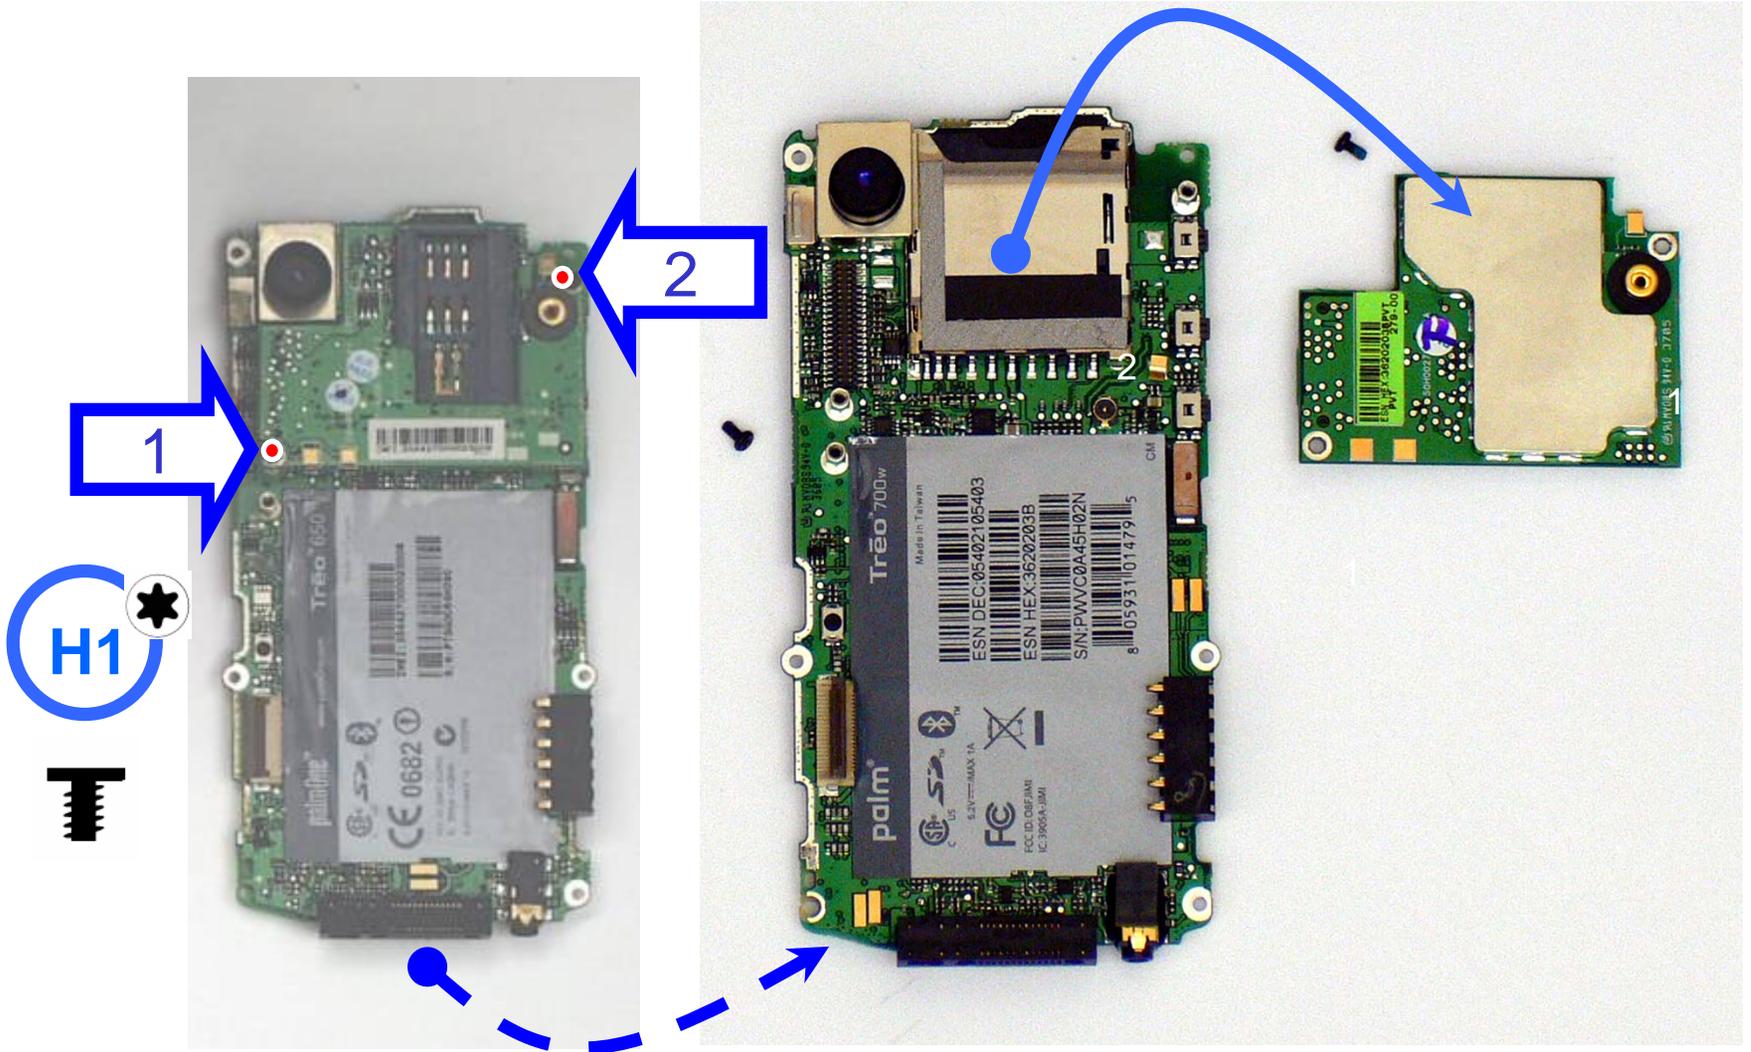



T700.17 ALL COMPONENTS - MATERIALS

