

AutoDimmer – Preference Panel for Automatic Backlight Control

AutoDimmer is the preference panel for automatic backlight control while there is no activity.

This application works with PalmOS5 or later devices.

You can download from [here](#).

Installation

Download AutoDimmer10.zip from above link, unzip it and install AutoDimmer.prc into your palm device. On Japanese device, AutoDimmer_jpJP.prc localize message to Japanese.

Uninstallation

Remove check from [Enable AutoDimmer] and delete AutoDimmer from your device.

Usage

Check [Enable AutoDimmer] to enable this AutoDimmer functionality.

Backlight and Dimmer Time setting controls become visible after enable AutoDimmer. [Maximum] is the backlight setting while device is in active state. [Minimum] is the backlight setting after detecting non activity for a specified period. [Dimmer Time] is used as period for detecting non activity.

On the cradle, AutoDimmer disables it's functionality automatically.

When changing backlight setting at AutoDimmer panel, backlight is turned on.

History

Version 1.0 2003/04/24 First Release



